



PANINI GRILL TL-5270

Operating Instructions



EAC

PANINI GRILL TL-5270 — Operating Instructions

General

The Panini Grill TL-5270 is a flexible, two-sided grill used to heat panini-style sandwiches quickly and easily.

The TL-5270 features a non-stick grill surface and adjustable temperature knob that can be set between 100°F (38°C) and 500°F (260°C). It can be used to grill sandwiches up to 2.75 inches (70 mm) thick.

Warranty Information

This unit includes a 90-day warranty for the manufacturer's workmanship. This warranty coverage does not require the support of our Authorized Service Agencies. For specific inquiries, contact Antunes at +1-877-392-7854 (toll free).

Equipment Setup

1. Remove the unit and all packing materials from the shipping carton.
2. Remove all packing materials and protective coverings from the unit.
3. Wipe all surfaces of the unit with a hot, damp cloth.

NOTE: Do NOT use a dripping wet cloth. Wring out before use.

4. Place the unit on a sturdy, level table or other work surface.
5. Ensure that the line voltage corresponds to the state voltage on the unit's specification label and power cord warning tag. If you are unsure about your line voltage, contact an electrician.
6. Connect the unit to the power supply.

Operation

1. Turn the unit on by turning the black temperature knob to the desired temperature.
2. The LED on the front will light up, indicating the unit is warming up. When the LED turns off, the unit is ready.
3. Place the sandwich on the bottom plate and use the handle to briefly apply pressure down onto the sandwich.

NOTE: Pressure from the top plate can be adjusted by using the black knob on the back of the unit. To increase the pressure, turn the knob counter-clockwise. To decrease the pressure, turn the knob clockwise.

4. Allow the sandwich to cook in the grill for as long as desired.
5. Use the handle on the top of the unit to lift the top plate up, then carefully remove the sandwich from the heating plate.
6. When finished, turn the grill off by turning the temperature knob to the off position.

NOTE: Be sure to close the grill when not in use.

Cleaning


1. Immediately after use, clean the top and bottom plates of the grill with a plastic scraper, removing all food that may be stuck.

NOTE: Do NOT use metal tools to clean the plates. Metal tools could scratch or cut the surface of the grill.

2. Turn the power off, unplug the power cord, and allow the unit to cool down.
3. Use a cloth and a general cleaning agent to wipe down the outside of the unit.
4. Plug the power cord in and return the unit to service.

PANINI GRILL TL-5270 – Operating Instructions

Dimensions

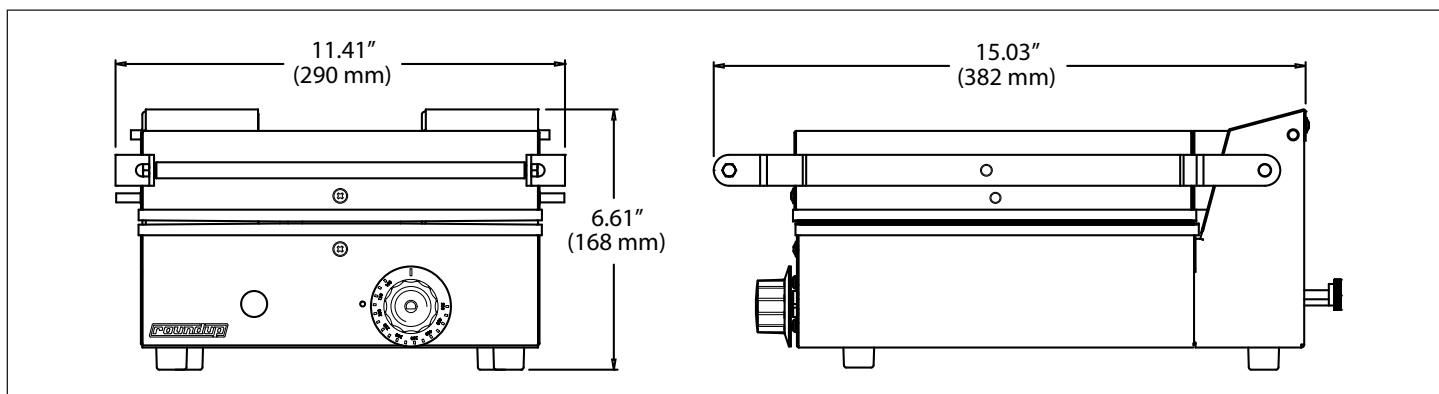

Electrical Ratings & Plug Configuration

Model & Mfg. Number	Volts	Plug Description
TL-5270 9800203	120	NEMA 5-15P 15 Amp., 120 VAC., Non-locking (Assembly only)
TL-5270 9800202	230	CEE 7/7, 10 Amp., 250 VAC, Non-locking
TL-5270 9800202	260	UK BS 1363, 13 Amp., 250 VAC



Corporate Headquarters

Carol Stream, Illinois
Phone: +1 (630) 784-1000
Toll Free: +1 (800) 253-2991
Fax: +1 (630) 784-1650

China Facility

Suzhou, China
Phone: +86-512-6841-3637
Fax: +86-512-6841-3907