

## DRAIN & RINSE



1 Defrost  
Press RESET, then Press & Hold STANDBY for 3S



2 When Defrost Completed Press RESET, Remove Feed Tube



3 Remove Hopper Agitators, then Press WASH




4 Drain Product then Press RESET



5 Add 8 Liters Water to Hopper



6 Scrub Sides and Bottom of Hopper

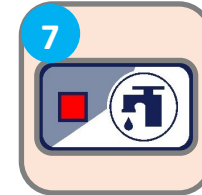

7 Press WASH



8 Drain Water then Press RESET



9 Repeat Steps 5-8 Until Water is Clear

## DISASSEMBLE



1 Switch to OFF



2 Remove Dispensing Door Nuts (Diagonally)



3 Remove Dispensing Door Assembly



4 Remove Door Gaskets & Front Bearings



5 Remove Prime Plug



6 Remove Handle Retention Nut & Pin




7 Remove Dispensing Handles & Draw Valves



8 Remove Seals



9 Remove Star-Caps

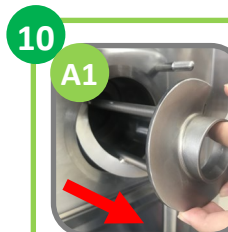


10 A1 Remove Beater Assembly




10 A2 Remove Seal from Beater

Option A: Stainless Steel Beater

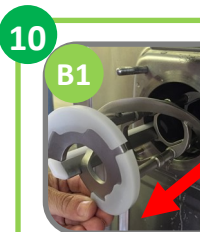

10 B1 Remove Beater Assembly

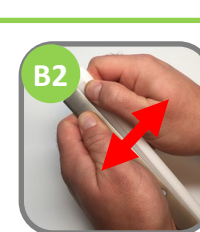

10 B2 Remove Scraper Blades and Separate from Scraper Clips



10 B3 Remove Beater Shoes



10 B4 Remove Drive Shaft & Seal

Option B: Flexible Blade Beater V1



10 C1 Remove Beater Assembly



10 C2 Remove Beater Blades



10 C3 Remove Drive Shaft & Seal

Option C: Flexible Blade Beater V2

## CLEAN



1 Remove & Clean Front Drip Tray



2 Remove & Clean Internal Drip Tray



3 Scrub Cylinders w/ Large Brush



4 Scrub Hopper Feed Hole & Agitator



5 Scrub Prime Plug Ports w/ Brush



6 Wash All Parts Thoroughly



7 Wipe Down Cylinder(s) w/ Clean Towel



8 Wipe Down Exterior of Machine

## ASSEMBLE

**1**



**A1**  
Lubricate Seal on Both Ends



**A2**  
Assemble and Install Beater Assembly



**A3**  
Rotate to Lock in Place (Beater Fully Inside)

Option A: Stainless Steel Beater

**1**



**B1**  
Install Drive Shaft Seal, Lubricate Drive Shaft and End of Seal (Shaded Area)



**B2**  
Install Drive Shaft into Cylinder, Rotate to Lock in Place



**B3**  
Install Beater Shoes




**B4**  
Install Beater Blades into Beater Clips




**B5**  
Assemble & Install Beater Assembly Rotate to Lock in Place (Beater Fully Inside)

Option B: Flexible Blade Beater V1


**1**




**C1**  
Install Drive Shaft Seal, Lubricate Drive Shaft and End of Seal (Shaded Area)




**C2**  
Install Drive Shaft into Cylinder, Rotate to Lock in Place



**C3**  
Install Beater Blades




**C4**  
Assemble & Install Beater Assembly




**C5**  
Rotate to Lock in Place (Beater Fully Inside)

Option C: Flexible Blade Beater V2

**2**




**2**  
Install & Lubricate Draw Valve & Prime Plug Seals



**3**  
Install Prime Plugs



**4**  
Install Draw Valves



**5**  
Install Dispensing Handles

**6**



**6**  
Install Handle Retention Pin & Nut



**7**  
Install Star Caps



**8**  
Install Door Gaskets and Front Bearings



**9**  
Install Dispensing Door Assembly



**10**  
Install Dispensing Door Nuts (Diagonally)



**11**  
Lubricate & Install Hopper Agitators



**12**  
Install Internal & Front Drip Tray

## SANITIZE & ADD PRODUCT

**1**




**1**  
Mix 8 Liters Sanitizer Solution Per Hopper




**2**  
Pour Sanitizer Solution into Hoppers

**3**



**3**  
Press RESET then Press WASH Wait 10-15 Minutes




**4**  
Drain Sanitizer Solution then Press RESET




**5**  
Thoroughly Prepare 7-16 Liters Product




**6**  
Pour 1 Liter Product into Hoppers




**7**  
Open Dispensing Valve to Purge Sanitizer Solution




**8**  
Pour in Remaining Product into Hoppers



**9**  
Open Prime Plug Until Product Flows Out from Bottom Prime Port

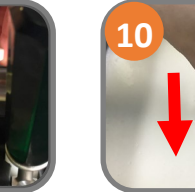

**10**  
Sanitize & Install Feed Tube & Hopper Lids



**11**  
Press FREEZE